



Common-line, Section 3.8.2.B

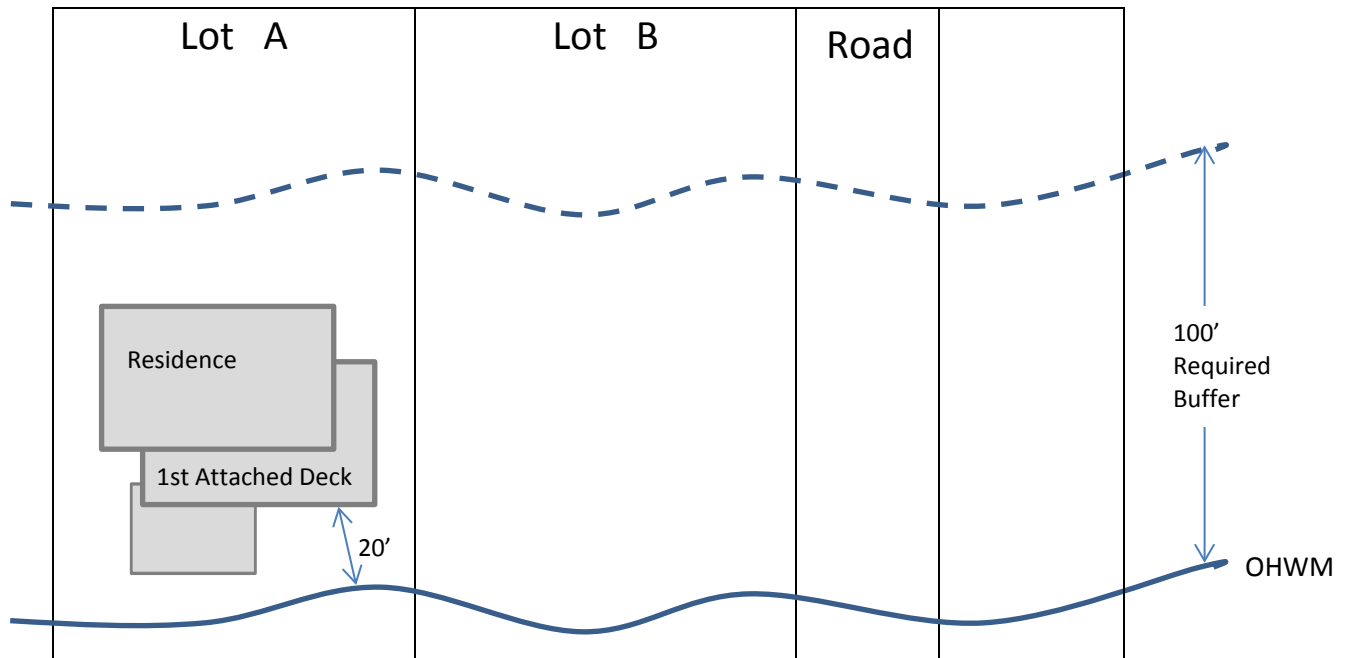


FORMULA = (Lot A + Road)/2 = Common line for Lot B
 EXAMPLE = (20' + 100')/2 = 60' Buffer for Lot B

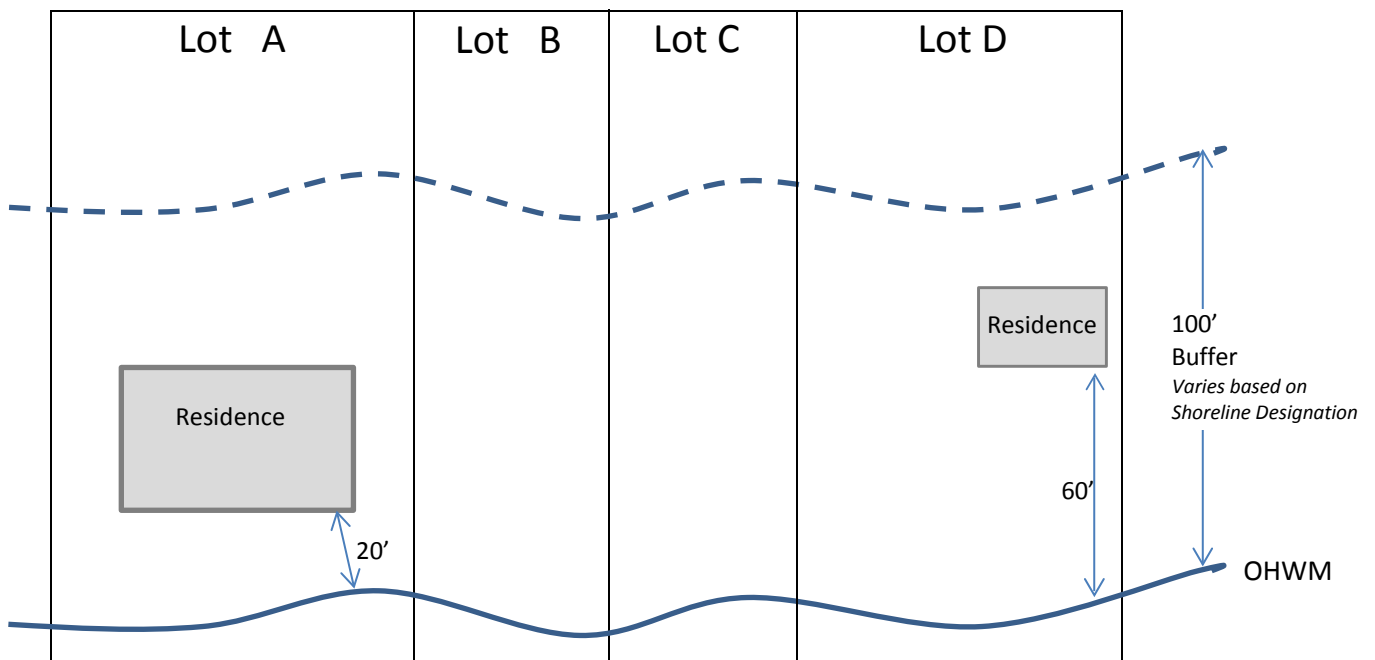

FORMULA to calculate vacant lot C common line = (Lot B + Lot D)/2 = (100' + 60')/2 = 80'
 FORMULA to calculate vacant lot B common line = (Lot A + Lot C's common line)/2 = (20' + 80') = 50'

Common-line, Section 3.8.2.B

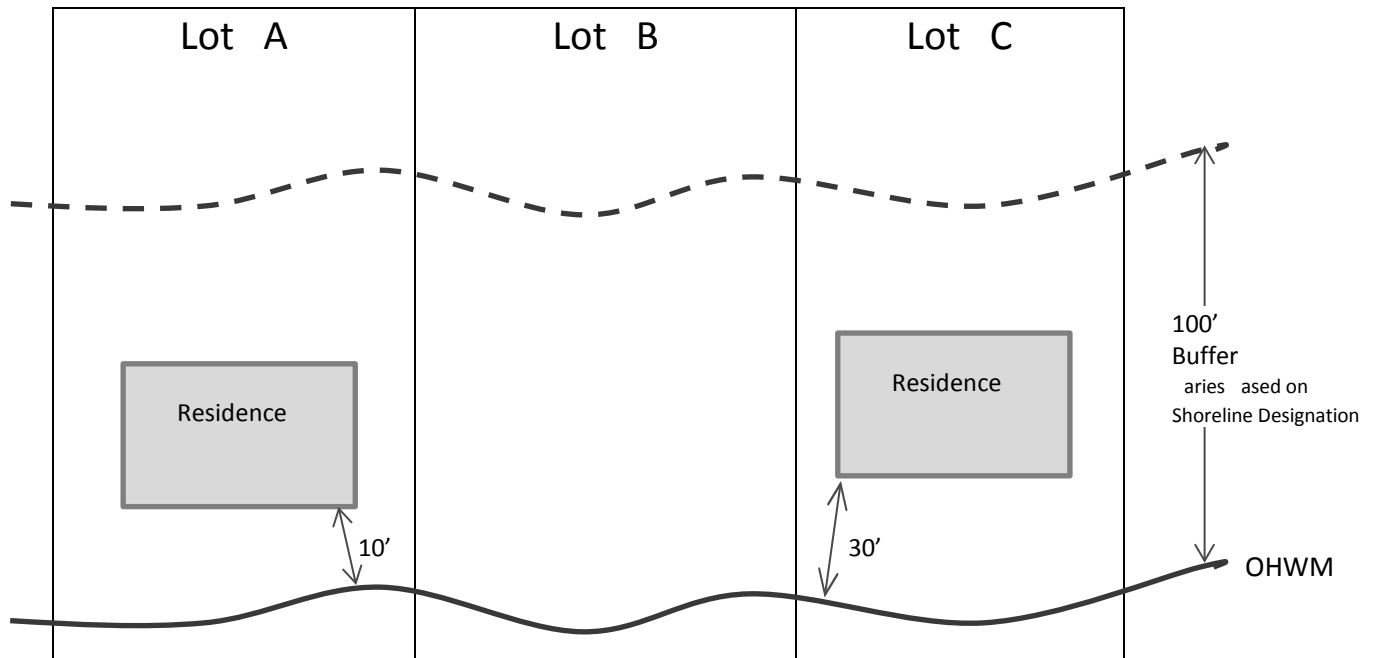

FORMULA = $(\text{Lot A} + \text{Lot C})/2 = \text{Common line for Lot B}$
 EXAMPLE = $(10' + 30')/2 = 20' \text{ Buffer for Lot B}$

Agricultural Land Change of Use, Section 3.8.2.F

